



IMPORTANT!

When pressed together, all connectors **must** make a **clicking sound**!
Especially, make sure that the **main connector** is **pressed hard** and clicks when pressed!

When connectors are not properly pressed together, dirt and moisture can enter them, causing the controller irreparable damage!



Improper installation may void your warranty. Follow the instructions and the User Manual to maintain coverage.