


# QUICK START GUIDE

Make sure you follow these instructions for a quick start with the TC500A72V for SurRon LightBee & Segway X260.

Connect the wires as shown below! Use only screws and tools included in the box. The Product must be used in combination with the **stock fuse** at all times! In case of incorrect installation, you will lose the Warranty and cause serious damage to the Product!

TC500 Controller is not an original SurRon/Segway part so you are using it at your own risk.

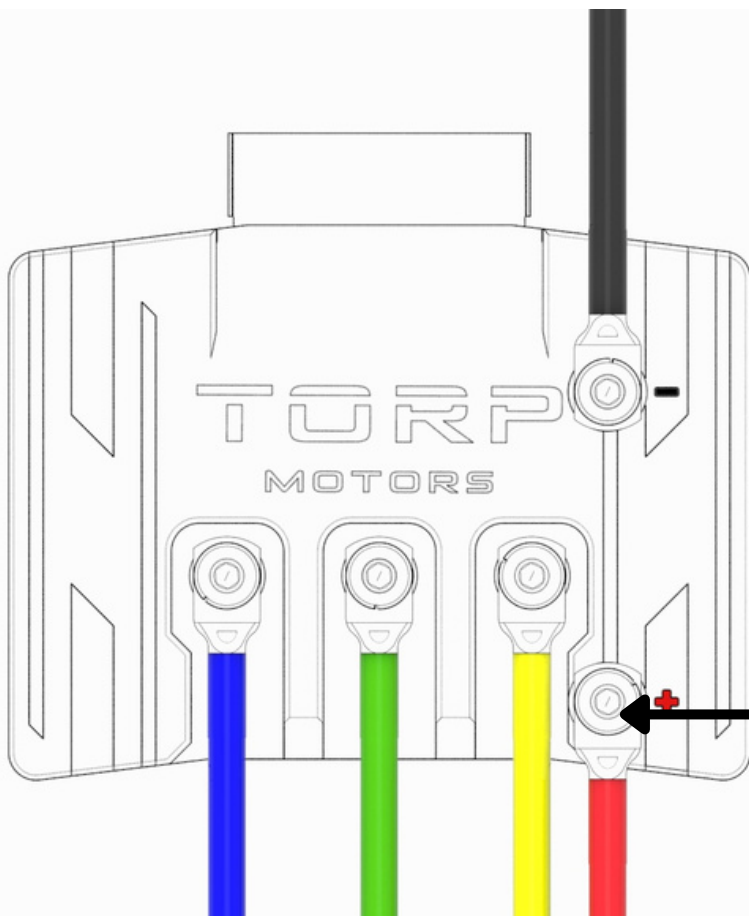

For proper installation watch the Installation Video:

[www.torpmotors.com/videotc500](http://www.torpmotors.com/videotc500)



M6 screws  
with Washers  
Max Torque 3.5 Nm  
**Fasten lightly!**

## Power Wires

Make sure to connect:

The **red battery wire** to the positive (+) electrode ●

The black battery wire to the negative (-) electrode ●

## Phase Wires\*

Make sure to connect:

The **Blue motor** wire to the the letter B ●

The **Green motor** wire to the the letter G ●

The **Yellow motor** wire to the letter Y ●

\*Not connecting phase wires correctly  
can cause the bike to go in reverse!

For additional help contact us at [support@torp.hr](mailto:support@torp.hr)